

Using the Portable Switcher (For a two-camera shoot)

Equipment Needed

2 cameras
2 batteries for set-up checks
1 tape per camera recording: to prevent stand-by
1 switcher
2 tripods
1 record deck with record tape
Microphones with stands (if necessary)
Wireless headsets (if necessary)
An extra duffel bag for above gear

The Wiring

(2) Monitors - preview and program
RCA cable for preview

(for 1) Camera

SVHS cable or RCA (can mix & match into "Y/C" or "Comp")
• adapter and cable if extra length needed

(1) SVHS deck

SVHS cable from switcher "Rec Out" to deck
RCA cable: line out from deck to program monitor
Use Input on the front

(1) Mixer

Microphones and cords as needed
Banana Plug 2 to 1 RCA cable from AUX out of Mixer into -
RCA Splitter going into Audio In 1 & 2
Headphones with Stereo Mini adapter into VCR's front panel

In the Switcher Cable Kit:

Tunnel Tape for covering up cables in walking areas
Gaffer Tape taping things together
3 Audio Cables
Power Strip for switcher/monitors/deck
3 Extension cords for 1 per camera and one for switcher
Mixer
Headphones with stereo-to-mini adapter
3 SVHS cables for the cameras
SVHS cable connector for connecting 2 SVHS cables together (put in baggie)
SVHS cable *From* switcher output *To* record deck line input
BNC Cable *From* record deck *To* record monitor
Banana Plug 2-to-1 RCA cable with RCA splitter
From aux out of mixer *To* Mixer audio in 1 & 2
RCA Cable with BNC Adapter *From* switcher preview *To* preview monitor
2 RCA cables (optional instead of svhs from camera – in baggie)